


Grablink Base

Frame grabber for one base-configuration Camera Link camera

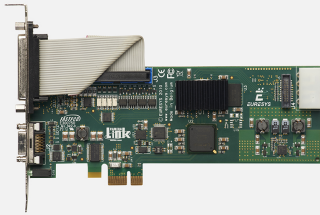

At a Glance

- For one Camera Link Base or Lite configuration camera
- Directly compatible with hundreds of Camera Link cameras available on the market
- Supports PoCL, Power over Camera Link
- ECCO: Extended Camera Link cable length
- PCIe x1 bus: 200 MB/s sustained delivery bandwidth
- Feature-rich set of 10 digital IO lines
- Memento Event Logging Tool

Benefits

ECCO: Extended Camera Link Cable Operation

- Use longer, up to 15 meters long, Camera Link cables!
- Download this document for more information

Directly compatible with hundreds of Camera Link cameras available on the market

Check out our camera compatibility page (in the Support menu) to download the relevant CamFiles

General purpose I/O lines

- Compatible with a wide range of sensors and motion encoders.
- High-speed differential inputs: Quadrature motion encoder support up to 5 MHz.
- Isolated current-sense inputs: 5V, 12V, 24V signaling voltages accepted, up to 50 kHz, individual galvanic isolation up to 500VAC RMS.
- Isolated contact outputs.

High-performance DMA (Direct Memory Access)

- Direct transfer into user-allocated memory
- Hardware scatter-gather support
- 64-bit addressing capability

Area-scan triggering capabilities

- A trigger is used to start the acquisition when the part is in position. Hardware triggers come from the Grablink's I/O lines. Software triggers come from the application.
- An optional trigger delay is available to postpone the acquisition for a programmable time.
- A trigger decimation function allows to skip some of the triggers.
- Camera exposure control allows the application to control the exposure time of the camera.
- When the acquisition starts, at the appropriate timing, the Grablink board generates a signal to control an illumination device connected to one of its output lines.

Line-scan triggering capabilities

Grablink supports continuous web scanning (to inspect infinite, continuously moving surfaces without losing a single line) and discrete object scanning (to acquire the image of objects moving in front of the camera).

- A trigger is used to start the acquisition when the part is in position. Hardware triggers come from the board's I/O lines. Software triggers come from the application.
- After it is started, the acquisition either:
 - Continues indefinitely (for web inspection applications)
 - Continues for a programmable number of lines (to acquire the image of objects of a known length)
 - Continues until an end trigger is received (to acquire the image of objects of a variable length)
- An optional trigger delay is available to postpone the beginning of the acquisition for a programmable number of lines.

Line-scan triggering capabilities

- The Grablink frame grabber controls the camera scanning rate based on the signals received from a motion encoder. When the parts move faster, the acquisition line rate of the camera increases. When the parts move slower, the acquisition line rate of the camera decreases.
- The Grablink boards interpret A/B signals from quadrature motion encoders to know in which direction (forward or backward) the part is moving.
- Optionally, the Grablink can be instructed to acquire lines only when the object is moving forward or only when the object is moving backward.
- A feature called Backward Motion Cancellation stops the acquisition when a backward motion is detected. The line acquisition automatically resumes when the motion is again in the forward direction, at the exact place where the acquisition was interrupted.
- A Rate Converter allows the camera to acquire lines at any programmable resolution lower or higher than the resolution of the motion encoder. This gives the designer incredible freedom and flexibility during the development of the application.
- A Rate Divider allows the camera to acquire lines at a resolution lower than the resolution of the motion encoder. It divides the frequency of the incoming encoder signal by a programmable integer.

Flexible line-scan camera operation with the rate converter.

- The rate converter is a smart, programmable frequency multiplier/divider.
- Used with motion encoders and line-scan cameras, it allows the user to choose the aspect ratio of the pixels in the image.
- It provides a way to calibrate the acquisition chain to easily reach square (1:1 aspect ratio) pixels.

Windows and Linux drivers available

Applications

Machine Vision for the Electronic Manufacturing Industry

- High speed image acquisition for AOI, 3D SPI, 3D lead/ball inspection machines.
- Very high resolution line-scan image acquisition for Flat Panel Display inspection and solar cell inspection

Machine Vision for the General Manufacturing Industries

- High frame rate image acquisition for inspection machines
- Line-scan image acquisition for surface inspection machines
- Line-scan image acquisition for textile inspection

Machine Vision for the Printing Industry

- High speed line-scan image acquisition for printing inspection machines

Video Acquisition and Recording

- High-frame-rate video acquisition for motion analysis and recording

Specifications

Mechanical

Form Factor	PCI Express card
Format	Low profile, half length, 1-lane PCI Express card
Cooling method	Air-cooling, passive heatsink
Mounting	For insertion in a low-profile or standard height, 1-lane or higher, PCI Express card slot
Connectors	<ul style="list-style-type: none">• 'A' on bracket:<ul style="list-style-type: none">– 26-position Shrunken Delta Ribbon (SDR) socket– Camera Link Base connector• 'EXTERNAL I/O' on standard bracket:<ul style="list-style-type: none">– 25-pin 2-row female sub-D connector– I/O lines and power output• 'INTERNAL I/O' on PCB:<ul style="list-style-type: none">– 26-pin 2-row 0.1" pitch pin header with shrouding– I/O lines and power output• 'POWER INPUT' on module:<ul style="list-style-type: none">– 4-pin MOLEX power socket– 12 VDC power input for PoCL camera and I/O power
Dimensions	L 167.65 mm x H 68.90 mm L 6.6 in x H 2.71 in
Weight	98 g, 3.46 oz

Host bus

Standard	PCI Express 1.0
Link width	1 lane
Link speed	2.5 GT/s (PCIe 1.0)
Maximum payload size	1024 bytes
DMA	32- and 64-bit
Peak delivery bandwidth	256 MB/s
Effective (sustained) delivery bandwidth	<ul style="list-style-type: none">• Up to 200 MB/s for a PCI Express payload size of 256 bytes• Up to 180 MB/s for a PCI Express payload size of 128 bytes
Power consumption	Max. 4.5 W; Typ. 3.8 W (0.34 A @ 3.3V; 0.22 A @ +12V)

Camera / video inputs

Interface standard(s)	Camera Link 2.0
ECCO - Extended Camera Link Cable Operation	ECCO
Number of cameras	One Base or Lite camera
Line-scan cameras supported	Yes
Maximum aggregated camera data transfer rate	2.04 Gbit/s (255 MB/s)
Camera Link configuration	Base or Lite
Camera Link clock frequency	From 20 MHz up to 85 MHz
PoCL (Power over Camera Link)	One PoCL SafePower compliant controller with overload, over-voltage and short-circuit protections
Camera types	<ul style="list-style-type: none">• Gray-scale and color (RGB and Bayer) cameras• Area-scan and line-scan cameras

Area-scan camera control

Trigger	<ul style="list-style-type: none">• Precise control of asynchronous reset cameras, with exposure control.• Support of camera exposure/readout overlap.• Support of external hardware trigger, with optional delay and trigger decimation.
Strobe	<ul style="list-style-type: none">• Accurate control of the strobe position for strobed light sources.• Support of early and late strobe pulses.

Line-scan camera control

Scan/page trigger	<ul style="list-style-type: none">• Precise control of start-of-scan and end-of-scan triggers.• Support of external hardware trigger, with optional delay.• Support of infinite acquisition, without missing line, for web inspection applications.
Line trigger	<ul style="list-style-type: none">• Support for quadrature motion encoders, with programmable noise filters, selection of acquisition direction and backward motion compensation.• Rate Converter tool for fine control of the pixel aspect ratio.• Rate Divider tool
Line strobe	<ul style="list-style-type: none">• Accurate control of the strobe position for strobed light sources.

On-board processing

On-board memory	64 MB (32 MB for image data)
Image data stream processing	<ul style="list-style-type: none">• Unpacking of 10-/12-/14-bit to 16-bit with selectable justification to LSb or MSb
Input LUT (Lookup Table)	<ul style="list-style-type: none">• Monochrome: 8-bit, 10-bit or 12-bit per pixel, up to 500 MPixel/s• RGB: 3x8-bit per pixel, up to 125 MPixel/s
Bayer CFA to RGB decoder	<ul style="list-style-type: none">• Advanced interpolation method using average and median functions on a 3x3 kernel• Up to 125 MPixel/s

General Purpose Inputs and Outputs

Number of lines	10 I/O lines: <ul style="list-style-type: none">• 2 differential inputs (DIN)• 4 isolated inputs (IIN)• 4 isolated outputs (IOUT)
Usage	<ul style="list-style-type: none">• The input lines can be used by the acquisition channel as:<ul style="list-style-type: none">– Camera frame trigger source (area-scan only)– Acquisition sequence trigger source (area-scan only)– Camera line trigger source (line-scan only)– Page acquisition trigger source (line-scan only)– Page acquisition end trigger source (line-scan only)– (Quadrature) motion encoder input (line-scan only)• The IOUT 1 output line can be used by the acquisition channel as:<ul style="list-style-type: none">– Illumination strobe output• All the input lines can be used as general purpose inputs• All the output lines can be used as general purpose outputs
Electrical specifications	<ul style="list-style-type: none">• DIN: High-speed differential inputs compatible with ANSI/EIA/TIA-422/485 differential line drivers and complementary TTL drivers• IIN: Isolated current-sense inputs with wide voltage input range up to 30V, compatible with totem-pole LVTTTL, TTL, 5V CMOS drivers, RS-422 differential line drivers, potential free contacts, solid-state relays and opto-couplers• IOUT: Isolated contact outputs compatible with 30V / 100mA loads
Filter control	<ul style="list-style-type: none">• Glitch removal filter available only on input lines used as trigger sources• Configurable with five time constants:<ul style="list-style-type: none">– 100 ns, 500 ns, and 2.5 μs for trigger / page trigger / page end trigger sources– 40 ns, 100 ns, 200 ns, 500 ns, 1 μs, 5 μs, 10 μs for line trigger sources
Power output	Non-isolated, +5V, 1A and +12V, 1A, with electronic fuse protection

Software

Host PC Operating System	<ul style="list-style-type: none">• Microsoft Windows 10, 8.1, 8, 7 for x86 (32-bit) and x86-64 (64-bit) processor architectures• Linux, from kernel version 2.6 to 4.13, compatible with a wide range of distributions, for x86 (32-bit) and x86-64 (64-bit) processor architectures
APIs	<ul style="list-style-type: none">• MultiCam 32- and 64-bit binary libraries (Windows and Linux), for ISO-compliant C/C++ compilers
Memento	Compatible with Memento Event Logging tool

Environmental conditions

Operating ambient air temperature	0 to +50 °C / +32 to +122 °F
Operating ambient air humidity	10 to 90% RH non-condensing
Storage ambient air temperature	-20 to +70 °C / -4 to +158 °F
Storage ambient air humidity	10 to 90% RH non-condensing

Certifications

Electromagnetic - EMC standards	<ul style="list-style-type: none">• European Council EMC Directive 2004/108/EC• United States FCC rule 47 CFR 15
EMC - Emission	<ul style="list-style-type: none">• EN 55022:2010 Class B• FCC 47 Part 15 Class B
EMC - Immunity	<ul style="list-style-type: none">• EN 55024:2010 Class B• EN 61000-4-2• EN 61000-4-3• EN 61000-4-4• EN 61000-4-5• EN 61000-4-6
Flammability	PCB compliant with UL 94 V-0
RoHS	European Union Directive 2011/65/EU (ROHS2)
REACH	European Union Regulation 1907/2006
WEEE	Must be disposed of separately from normal household waste and must be recycled according to local regulations

Ordering Information

Product code - Description	<ul style="list-style-type: none">• 1624 - Grablink Base
----------------------------	--



AMERICA

Euresys Inc.

27126-B Paseo Espada - Suite 704
San Juan Capistrano, CA 92675 - United States
Phone: +1 949 743 0612
Email: sales.americas@euresys.com

EMEA

Euresys SA

Liège Science Park - Avenue du Pré-Aily, 14
4031 Angleur - Belgium
Phone: +32 4 367 72 88
Email: sales.europe@euresys.com

ASIA

Euresys Pte. Ltd.

750A Chai Chee Road - #07-15 Viva Business Park
Singapore 469001 - Singapore
Phone: +65 6445 4800
Email: sales.asia@euresys.com

CHINA

Euresys Shanghai Liaison Office

17F, Unit AB, N. 588 Yan An Dong Road - Huangpu District
CN-200001 Shanghai - China
Euresys上海联络处
上海黄浦区 延安东路588号17楼AB座
200001
Phone: +86 13817814488
Email: sales.china@euresys.com

JAPAN

Euresys Japan K.K.

Expert Office Shinyokohama - Nisso Dai 18 Building, Shinyokohama 3-7-18
Kouhoku-Ku, Yokohama-Shi 222-0033 - Japan
〒222-0033
神奈川県横浜市港北区新横浜3-7-18 日総第18ビル エキスパートオフィス新横浜
Phone: +81 45 594 7259
Email: sales.japan@euresys.com

More at www.euresys.com

